


EXPLODED DARWING
LS8000B/DC550S-8
20190327

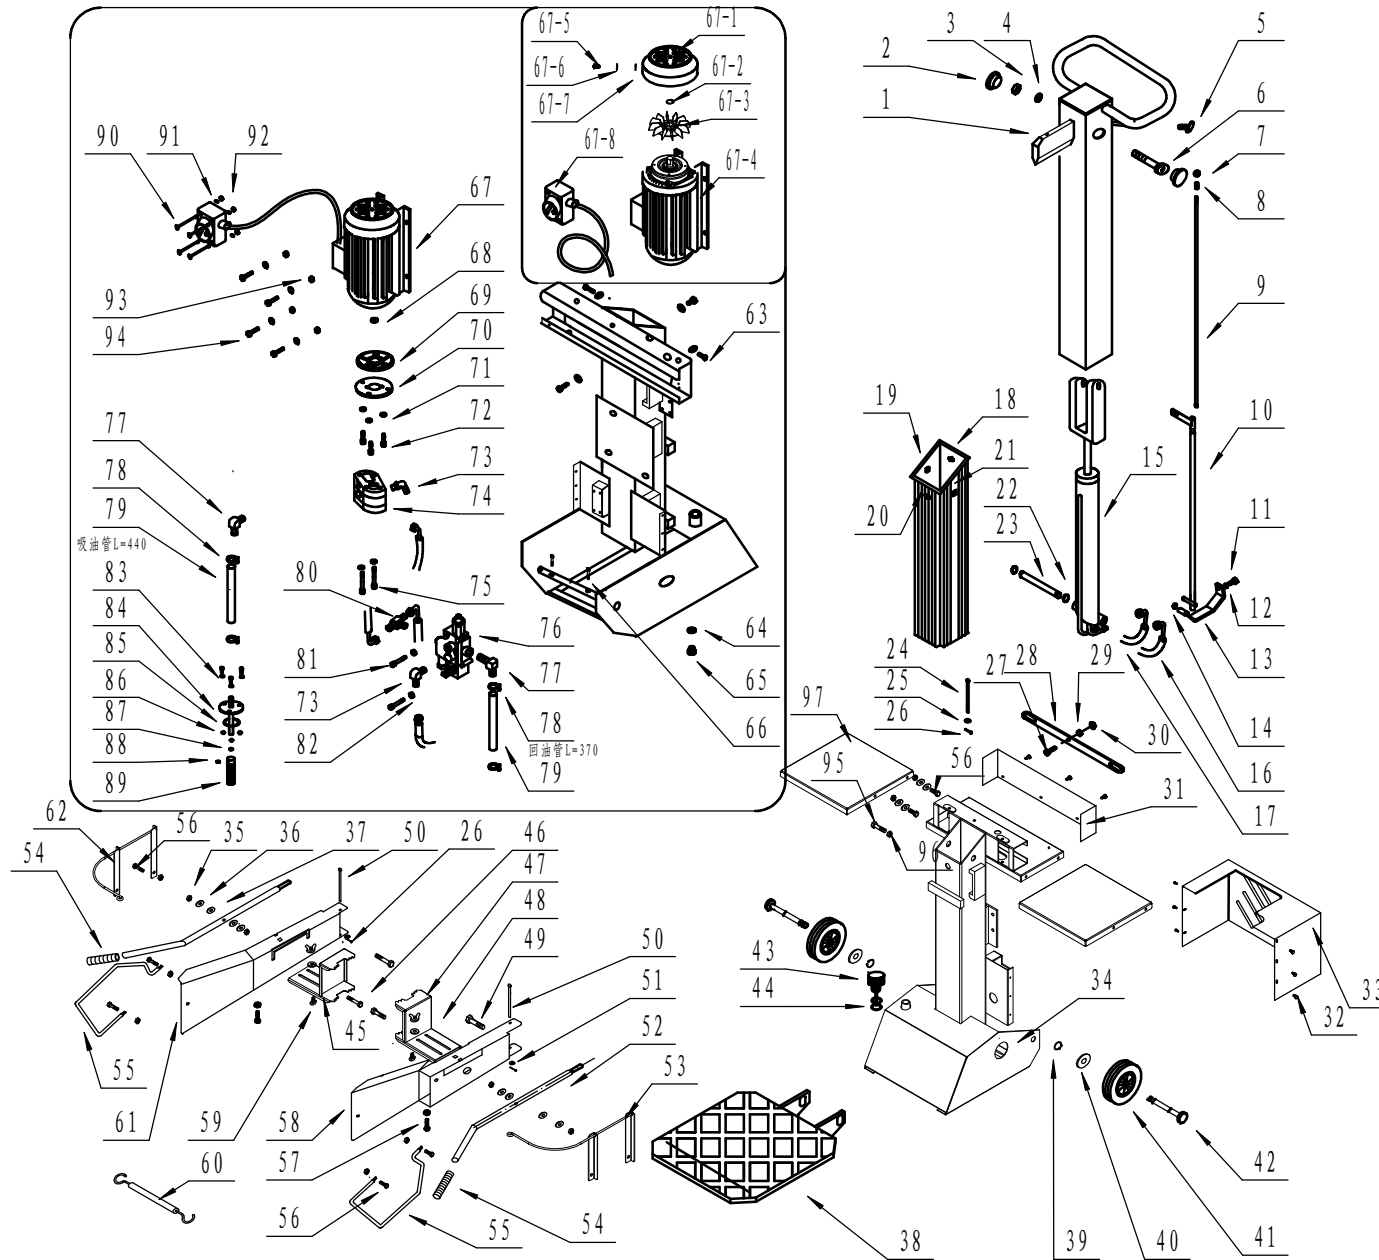

Part List LS8000B/DC550S-8

20190327

pos no.	DESCRIPTOIN	qty
1	Knife column	1
2	plug	2
3	nut 20	1
4	Spring washer 20	1
5	Fixing screw	1
6	screw 20x60	1
7	Locking nut 8	1
8	spring	1
9	stroke rod	1
10	bush	1
11	Bolt 10x20	1
12	Spring washer 10	1
13	see saw	1
14	Spindle circlip 9	1
15	Cylinder	1
16	Rubber hose C3C	1
17	Rubber hose C2C	2
18	Sliding pad-front	1
19	Sliding pad-left	1
20	Sliding pad-back	1
21	Sliding pad-right	1
22	Spindle circlip 20	2
23	Cylinder Pin	1
24	B-type pin	1
25	Flat washer 6	1
26	Split pin	3
27	Bolt 6x25	1
28	Transmission bar	1
29	Nut 6	1
30	Nut 6	1
31	metal guard	1
32	Screw 5x8	9
33	Guard for pump&valve	1

34	Main frame	1
35	Locking nut 8	10
36	Flat washer 8	12
37	Washer	4
38	Work table	1
39	Spindle circlip 16	2
40	Flat washer 16	2
41	Wheel	2
42	wheel axle	2
43	Oil level stick	1
44	O-ring 15x2.65	2
45	Log claw-left	2
46	Bolt 8x45	2
47	Nut 8	2
48	Log claw-right	1
49	Bolt 8x55	2
50	B-type pin 8	2
51	Flat washer	28
52	Control handle	2
53	Hand protector-upper left	1
54	Handle grip	2
55	Hand protector- left&right	2
56	Bolt 8x16	12
57	Bolt 8x30	2
58	Handle guard-right	1
59	Bolt 8x16	2
60	Rubber belt	1
61	Handle guard-left	1
62	Hand protector- upper right	1
63	Bolt 8x10	4
64	oil seal O-ring	1
65	plug	1
66	Screw 6X20	5
67	Electric motor to HS 804 Basic	1
67-1	motor fan cover	1
67-2	Spindle circlip 20	1
67-3	Flying fan	1

67-4	Motor w/out switch	1
67-5	Screw 4X8	3
67-6	Spring washer 4	3
67-7	Flat washer	3
67-8	Switch to HS 804	1
68	adaptor	1
69	Motor base	1
70	Pump base	1
71	Spring washer 8	3
72	Screw 8x30	3
73	Elbow	2
74	Pump to HS 804	1
75	Screw 8x115	2
76	Vavle	1
77	Elbow	2
78	Pipe hoop	4
79	Oil pipe 14	0,92
80	T-type connector	1
81	Screw 8x55	2
82	Nut 8	12
83	Spring washer 6	3
84	Oil pipe -zinc	1
85	O-ring 27x2.65	1
86	Lock nut 6	3
87	O-ring 14x2.65	1
88	Screw 6x6	1
89	Filter cpl.	1
90	Screw 4x60	4
91	Washer 4	4
92	Nut 4	4
93	Lock nut 8	4
94	Bolt 8x20	4
95	Bolt 10x35	1
96	Locking nut 10	1
97	Log storage table	2